

# Installation Manual

## Multisealant GR



1



Make sure that the service penetration and the gap are free from dust, dirt and grease. Moisten the structure, if necessary.

3



Smooth the joint with a damp spatula or filler knife.

2



Apply Multisealant GR generously in the gap to prevent air bubbles <sup>1)</sup>.

4




Fill in the conformity statement and paste it next to the fireproof seal.

<sup>1)</sup> When using backing, cut it slightly wider than the joint width and make sure it is applied to the correct depth in the joint.



### Information

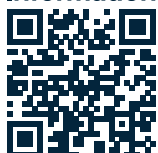

For use and for more information about an application, refer to the Mulcol documentation and local and international approvals. See the **Mulcol Fire Protection app** for the correct application in combination with fire resistance, or use our selector at [www.mulcol.com](http://www.mulcol.com)  
For professional use only.

**MULCOL**  
INTERNATIONAL